CM16.book Page i Friday, June 18, 2004 3:22 PM

AASTRA

CM -16 USER GUIDE

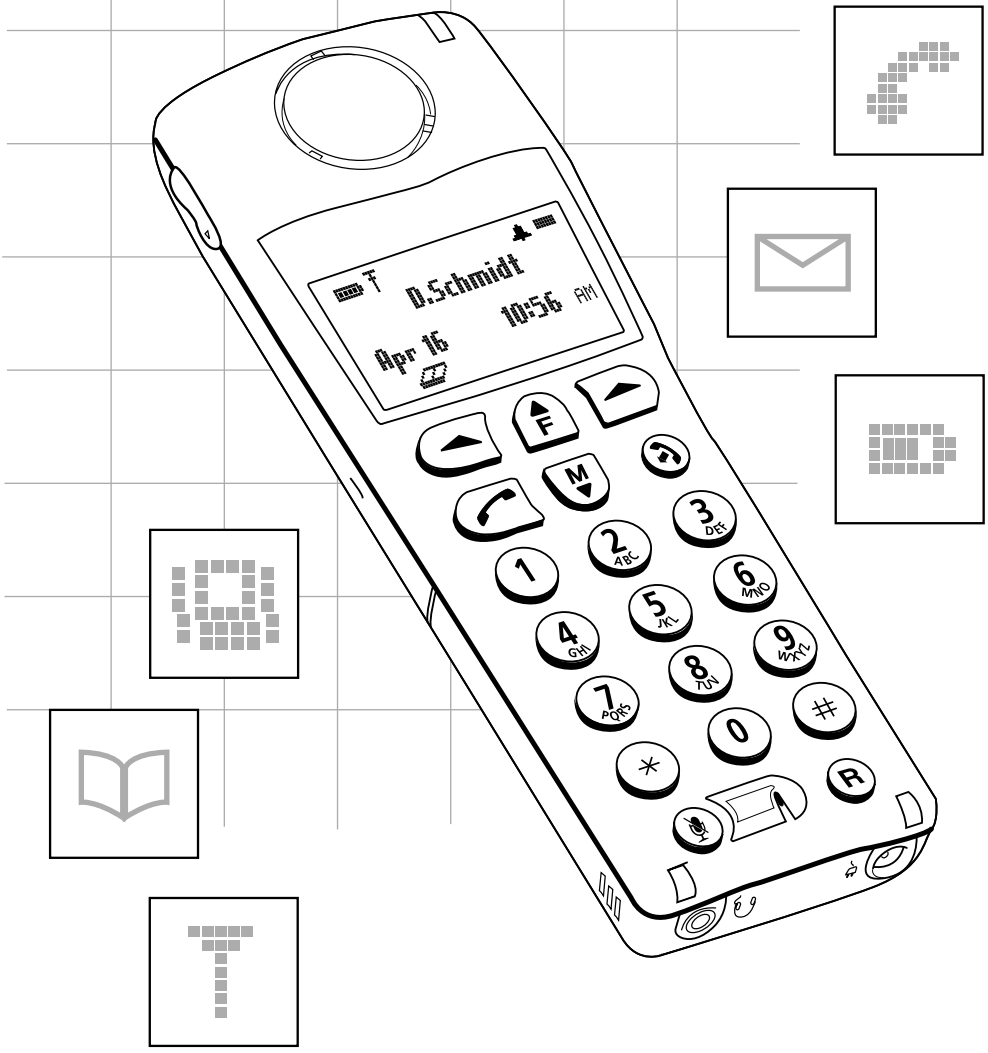

Downloaded from www.Manualslib.com manuals search engine

Table of Contents

SAFETY INFORMATION **2**
Handset and Base Station 2
Batteries 2
INSTALLATION **4**
Base Station 4, 5
Charging Cradle 5
Battery Charging 6
Belt Clip 6
Using a Headset with your Telephone 6
Battery Status Icons **6**
CM-16 HANDSET KEY FUNCTIONS **7, 8**
Screen Display **9**
Screen Icons **9**
Screen Prompts **10**
Making and Answering Calls **11**
Redial **11**
Hold function **12**
Mute Key **12**
Ringer/Alerter tones **12**
Volume Control **12**
To adjust the receiver volume 13
To adjust the ringer volume 13
Status Light **13**
Feature Key List **13**
OPTIONS **14**
Language **14**
Key Label **15**
To edit key label text 15
To delete a single key label 15
To delete all feature label text 15
Ring Tone **16**
Custom Name **16**
Call Timer **16**
Vibrate **17**
Handset Pairing **17**
Key Lock **17**
Backlight **18**
Silent Alert **18**
Directory **19**
Adding a name and number to the Directory 19
Entering Letters and Characters 19
Finding entries in the Directory 20
Dialing from the Directory 20
Changing entries in the Directory 20
Deleting an entry in the Directory 21
Limited Warranty **22**

Downloaded from www.Manualslib.com manuals search engine

SAFETY INFORMATION

Prior to installing and using the telephone, please read the following important safety information.

HANDSET AND BASE STATION

Do not:

- Rely only on this telephone as your only means of communication in the event of an emergency. As this handset uses radio signals, a connection to the telephone network cannot be guaranteed in all circumstances.
- Use this handset near medical equipment such as pacemakers.
- Place the handset in areas subject to explosive hazards, flammable liquids or gases.
- Set up and use the handset close to devices that emit electromagnetic fields (i.e. electric motors, household appliances, fluorescent lamps, computers, radios, televisions, VCR's, DVD's etc.) Operation of the handset could be adversely affected if exposed to such fields and, at minimum, subject to interference and poorer quality voice communication.
- Locate the handset and base station near water, moisture, damp areas, heat sources, direct sunlight, areas with excessive dust, vibration or temperature extremes.
- Clean the handset using any chemical or commercial cleaner. Use only an anti-static or soft moistened cloth to clean the handset. Disconnect the charger stand prior to cleaning.

BATTERIES

Please observe the following guidelines when dealing with the batteries:

- Never tamper with or dismantle the battery pack
- Avoid touching the battery contacts
- If necessary, clean the contacts with a damp cloth
- Protect the battery contacts from contact with any metal objects
- Never immerse batteries in water or throw them into a fire

When setting up the phone:

- Use only the rechargeable batteries supplied with this product
- Follow the battery installation instructions included with this guide

Note: That it takes two to three charging cycles for the batteries to reach their fully charged state.

- Charge the batteries using only the charger stand supplied with this product

Downloaded from www.Manualslib.com manuals search engine

In operation:

- It is normal for the batteries to become warm when charging.
- Discharge the batteries from time to time to prolong their service life. To do this, do not place the phone back into the charger stand until the batteries are completely or almost completely discharged. The battery icon on the display will indicate when the batteries are low and an alert tone is sounded every three minutes.
- Only use batteries and charging units approved by the manufacturer.
- If you do not intend to use the phone for an extended period, the batteries should be removed from the handset.
- Store batteries at room temperature. Above average temperatures tend to reduce the service life of batteries.
- Do not throw away or incinerate used batteries. Take them to an appropriate collection point for recycling or send them back to your supplier or distributor.

The batteries included with the CM-16 are designed to provide up to four hours talk time and eighty hours standby time. Actual battery performance can be affected by a wide variety of environmental and user factors.

REGULATORY INFORMATION

This class B device complies with Part 15 of the FCC rules and ICES-003 Class B Canadian EMI requirements. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) This device must accept interference received, including interference that may cause undesired operation.

Downloaded from www.Manualslib.com manuals search engine

INSTALLATION

The CM-16 consists of a base station, wireless handset and a charging base stand. The following diagram provides an overview of the installation of the product using the power supply provided.

Your System Administrator should be aware of the Meridian settings required to make this telephone operational within your business environment.

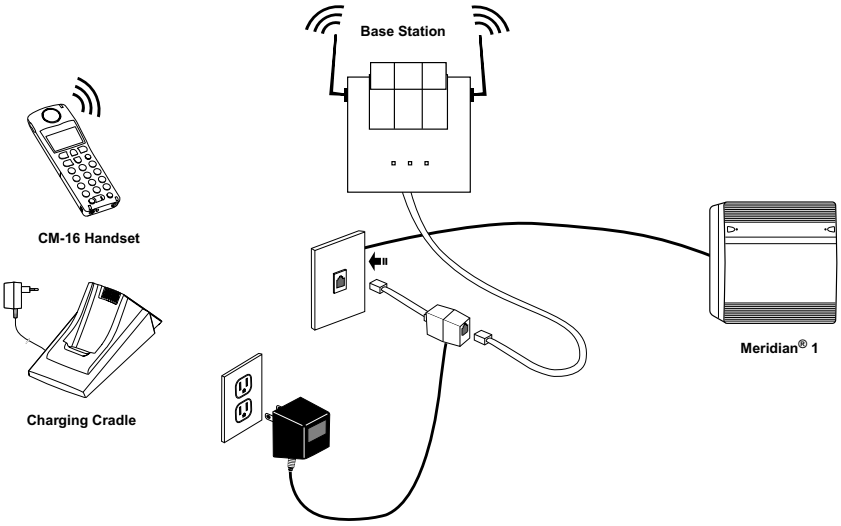

Base Station

The base station can be placed on a flat surface or be wall mounted. For optimum range performance, wall mounting is recommended.

Location of the base station can have significant impact on performance. It is recommended that the base station be located:

- Away from metal objects such as filing cabinets, metal blinds or other metal support structures
- Away from other electronic devices such as CRT's, desktop computers and other cordless products
- As high as possible with the antennas pointing up in a vertical position.

Downloaded from www.Manualslib.com manuals search engine

Base Station (continued)

To wall mount the base station:

- Locate the wall mounting strip located on the back side of the base station
- Slide the strip out from the base station (Fig A)
- Turn the strip around and secure firmly to the wall using the screws supplied (Fig B)
- Plug the line cord into the jack on the unit
- Slide the base station over the strip until it clicks into place (Fig C)

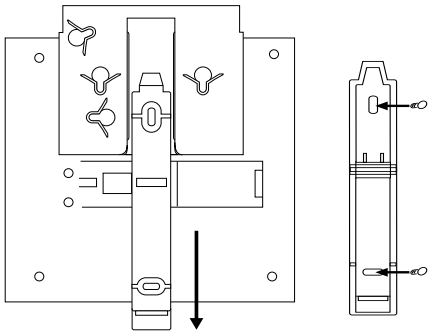

Figure A

Figure B

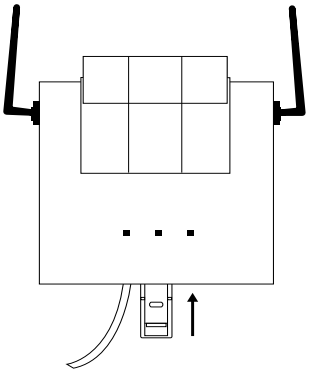

Figure C

Charging Cradle

The charging cradle is designed to be placed on a desk or any similar flat surface in the vicinity of the base station. To set up the charging cradle:

1. Plug the appropriate power adapter plug into the bottom of the charging cradle.
2. Plug the other end of the power adapter into an AC outlet. It is recommended that the adapter should not be plugged in to an electrical power bar and should be the only item plugged in to the AC outlet.

Downloaded from www.Manualslib.com manuals search engine

Battery Charging

The handset is powered by a nickel metal hydride battery pack. To install and charge the battery:

1. Slide the cover off of the battery compartment.
2. Place the battery pack in the compartment with the connector wires pointing towards the bottom of the handset.
3. Connect the battery terminal wire to the charging pins located in the compartment
4. Slide the cover of the battery compartment back onto the handset
5. Place the handset, face up, in the charging cradle. The handset should easily slide into the charging cradle. If it does not, check the battery compartment cover to ensure it is in the proper position.

To confirm that the battery is charging, check the battery icon symbol on the handset display to see if the lines inside the icon are flashing left to right.

Note: The battery must be charged for a minimum of six hours prior to initial usage of the phone.

Belt Clip

To install the belt clip, snap one arm of the clip into the slot on the side of the handset and then slide the other arm into the slot on the other side of the handset until it snaps into place.

Using a Headset with your Telephone

The CM-16 accepts headsets through the jack on the bottom of the handset. Contact your telephone equipment retailer or distributor to purchase a compatible headset. Customers should read and observe all safety recommendations contained in headset operating guides when using any headset.

BATTERY STATUS ICONS

The display provides "at a glance" information on the handset battery

	The bars indicate the battery charge level — 4 for full, needs recharging when only 1 bar appears.
	The bars will flash when the battery is being recharged on the charger stand.

Note: The handset is designed to recharge the batteries automatically, when required and placed on the charger stand. The battery icon will not flash and the handset does not charge every time it is placed on the stand. If a defective battery is replaced, then the battery Icon is not identified until the new battery is charged for at least 2 minutes.

Downloaded from www.Manualslib.com manuals search engine

CM-16 HANDSET KEY FUNCTIONS

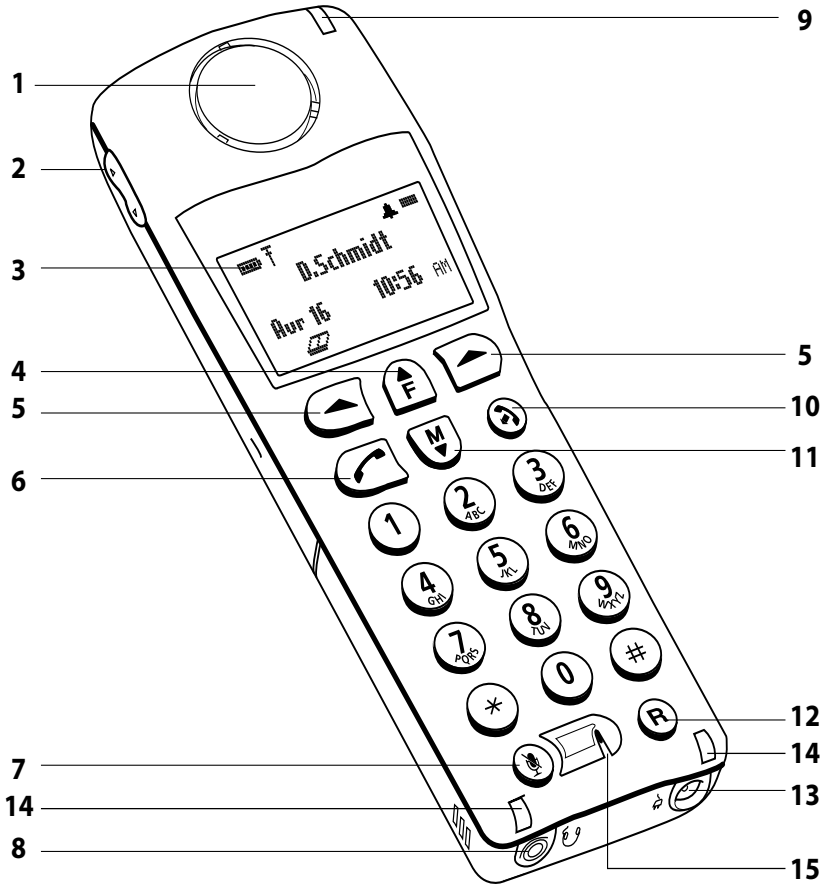

Downloaded from www.Manualslib.com manuals search engine

CM-16 HANDSET KEY FUNCTIONS

Function #	Function Description
1	**Receiver**
2	**Volume key** • During Ringing: Adjusts ringer volume • During a call: Adjusts receiver volume • During text mode (not in a call): Moves cursor right/left
3	**Display**
4	**Features F Key List** • Access key to the M1 Feature key list • Scrolls up when in the various lists • Add a space during editing
5	**Softkeys** • Activates feature or option shown on the display above the keys
6	**Call key** • Used to obtain dial tone • Also used as a Hold key
7	**Mute key** • When used, prevents the caller from hearing you
8	**Headset jack**
9	**Status Light**
10	**Release key** • To end calls and go on hook • Exits Menu and the various lists.
11	**Menu M key** • Access key to the different Options • Scrolls down when in the various lists. • Used as Backspace during editing
12	**Redial R key** • Displays the last 10 numbers dialed
13	**Charging jack**
14	**Charging contacts**
15	**Microphone**

Downloaded from www.Manualslib.com manuals search engine

SCREEN DISPLAY

The screen display on the CM-16 provides five lines, 15 characters per line of display area. Pressing any key will light up the display if the Backlight option is On.

The display provides a variety of information, using text or icons, pertaining to set status, including battery strength, reception range and selected settings. Caller information, option menus, instructions, time and date and general information about calls in progress may also appear.

In addition, at the bottom of the screen display, softkey functions will appear. These functions or options change based on activity and can be activated by pressing the appropriate key just below the display. For M1 functions, the screen can display functions that are activated by pressing the softkey. See the **"Features List"** section of this guide for more information.

Note: Whenever the display indicates **Use ▼▲ to view** use the ▲F key to scroll up and the M▼ key to scroll down.

SCREEN ICONS

	Battery Strength 4 bars for battery full and the bars flash when charging
	Reception Range Indicates that the handset is within range of the Base Station and that the Base Station is powered.
	Call in progress Indicates that you are off hook
	Message Waiting Indicates a message waiting
	Vibrate Vibrate activated * This symbol indicates that vibrate is active. The difference between vibrate and silent alert is that the phone will also ring in vibrate mode, but will not in silent alert mode.
	Directory Directory, which can store up to 50 names and numbers in alphabetical order. Note that the Directory Softkey can be overwritten by a feature key during a call. The directory softkey can always be accessed from within the options list.

Downloaded from www.Manualslib.com manuals search engine

	Ringer Volume This Icon appears when the phone is not in use to indicate the ringer volume level. As the ringer volume level is increased, from off to high, the box will go from empty to fully black. This icon does not appear when silent alert is activated. The bell icon and the vibrate icon can be present at the same time. This means both the vibrate and audio alerters are active. If the vibrate icon is shown, that means the phone is in silent alert mode. If just the bell is displayed, then the phone is in normal alert mode with only the audible alert active.
	Receiver Volume This Icon is available only when the phone is Off hook. Displays the receiver audio volume from low to high with the box gradually filling up as the volume level is increased.

SCREEN PROMPTS

Display Message	Description
Microphone mute	Indicates when the Mute button has been Activated
Out of range	Appears briefly when pressing a key if out of range of the base station
Check Line Cord	Will appear if the line cord is not properly connected to the base station.

Downloaded from www.Manualslib.com manuals search engine

MAKING AND ANSWERING CALLS

To make a call:

Press the ✆ key to obtain dial tone and use the Keypad to dial the number

OR

Predial the number first using the Keypad. The number, as entered, will appear on the display. If the number is correct, press the ✆ key to dial the number. If number is incorrect use the M▼ key or press down on the volume key to erase digits from right to left.

If you need to add a pause to a number (for example, between a telephone number and an access code) press the **PauseKey** softkey to insert a 2 second pause into the number.

Calls can also be made directly from the Directory. See the **"Directory"** portion of this guide for further information.

To end a call:

Press ☎ key

OR

Return the handset to the charging cradle.

To answer a call:

Press the ✆ key to answer an incoming call or lift the handset out of the charging cradle.

REDIAL

To redial the last 10 numbers:

When on hook

- Press **R** key, and use the ▲F and the M▼ keys to scroll up and down through the list of the last ten numbers dialed
- Press the ✆ key to dial the selected number or press the Line softkey to select an outgoing line and the Select softkey and the selected number will automatically be redialed

When off hook

- Press **R** key and the last number dialed will automatically be redialed.

In addition to redialing the last 10 numbers, the CM-16 allows redialed numbers to be deleted from the redial list or saved to the Directory, while on hook.

To add a redialed number to the directory:

- Press **R** key, and use the ▲F and the M▼ keys to scroll up and down through the list of the last ten numbers dialed.

Downloaded from www.Manualslib.com manuals search engine

- Once the selected number appears on the display, press the **Options** softkey — the display shows **Save ▸Directory and ▾=Next**
- Press the **Select** softkey. If there is no name associated with the number, the display will prompt, to enter a name to save the entry. Use the instructions in the section **Adding a Name and Number to the Directory** to save the entry in the Directory. If there is a name associated with the number it will automatically save it to the directory and briefly indicate **item saved**.

To delete an entry in the Redial list:

- Press **R** key, and use the ▲ and the ▼ keys to scroll up and down through the list of the last ten numbers dialed
- Once the selected number appears on the display, press the **Options** softkey and the ▼ key once — the display shows **Delete and ▾=Next**
- Press the **Select** softkey. The display will show **Delete again to erase this item**.
- Press the **Delete** softkey to erase the entry. Display shows **Item erased**.

You can return to the main display any time by pressing the ☎ key.

HOLD FUNCTION

To place a call on hold, press the ☎ key. To take a call off hold, press the ☎ key again.

MUTE KEY

Use the mute key when you want to be able to hear a caller but have them not hear you. Press the 🎤 key to mute the handset. Press the 🎤 key again to disengage mute.

ALERTER TONES

The CM-16 uses tones to provide information as follows:

Low Battery	one tone every three minutes
Out of Range	whenever handset loses connection to base station
Check Line Cord	Whenever you try to establish a link with the base station and the DC power is not plugged in and/or the line cord is not plugged into the base.

VOLUME CONTROL

The volume key, located on the side of the handset, controls both the receiver and ringer volume.

Downloaded from www.Manualslib.com manuals search engine

Note: The volume key can also be used to adjust the right/left cursor to add spaces or to erase characters on the display when editing or creating names, key labels etc.

To adjust the receiver volume:

- While on a call, press the top of the key to increase the receiver volume and press the bottom of the key to decrease the volume. The receiver volume icon on display will indicate the current volume level. In absence of a PBX, the receiver volume returns to the default setting after each call. However, the PBX directive can direct the handset default to the volume.

To adjust the ringer volume:

- When the handset is not being used for a call, press the top of the key to increase the ringer volume and press the bottom of the key to decrease the ringer volume. The handset ringer will sound on each adjustment to reflect the new setting and the ringer volume icon on display will also show the current level chosen.

STATUS LIGHT

The green LED light on the handset indicates the following conditions:

Incoming call	flashes rapidly	**Call on hold**	solid green
Handset muted	flashes rapidly	**Features activated** (only while on hook) / **message waiting**	solid green

FEATURES LIST

There are 14 Meridian features available through the CM-16. The features list can be accessed through the Feature **F** key of the CM-16. When scrolling through the features list, a darker scroll bar highlights the feature that can be selected. If the Meridian features are labeled instead of pre-programmed and identified on handset, the features list on the CM-16 menu display will be identified by item numbers from 00 to 14 with no text (example **<09>**) **Note that Meridian Key 07 and 15 features are not available on the CM-16.** Also, the first **key <00>** in the list will always be the primary DN.

- Each feature can be labeled manually through the Edit option. See the "**Key Label**" option in this guide for detailed labeling instructions.
- The ▶ indicates that the feature is activated or flashing during the program state.
- To activate one of the features press the **Select** Softkey.
- To cancel an activated M1 feature key, press the **Cancel** Softkey or ☎ key to end the call.

See your system administrator and your M2600/M2616 user guide for further information on Meridian features available.

Downloaded from www.Manualslib.com manuals search engine

OPTIONS

To access the options list:

1. Press the **M** key **when the phone is not in use** — the display will indicate **Use ▲▼ to view**. Use the ▲F and ▼M keys for scrolling.
2. There are ten options that can be accessed by either scrolling to the option or by using the keypad to dial the option number as per the table below.

Option	# Options list
1	Language
2	Key label
3	Ring tone
4	Custom name
5	Timer Off
6	Vibrate Off
7	Hset pairing
8	Key lock Off
9	Backlight Off
10	Silent Alert Off

Note: The Menu and Options display revert to the regular idle mode display if no action/activity is initiated within 20 seconds.

Press ☎ key to quit at any time and to return to the main idle display screen.

Language

The CM-16 offers a choice of English, French and Spanish display languages. The default language setting is English. The language display in use is always identified with a check mark.

To change the display language, follow the display menu prompts using the two softkeys as required to change, cancel or select a language option. The display will always show **–confirmed–** when the selection is changed. Pressing the **Cancel** softkey will return you to the previous display.

Pressing the ☎ key will return you to the main idle display screen.

Downloaded from www.Manualslib.com manuals search engine

Key label

The Key label option gives access to the display text associated with the 14 Meridian features that can be programmed with to CM-16 handset.

Text to identify a specific feature can be added, modified or deleted or all feature key text can be deleted at once. Labels can have up to 14 characters.

To edit key label text

Press the **Change** softkey from the key label display

- At the Edit display screen, press **Select** softkey — this will display the key label **00**
- Use the scroll keys to find the feature key desired
- Press the **Edit** softkey
- Use the keypad to type out a new label or use the scroll keys ▲ and ▼ to move the cursor to the desired display position or to erase text. (See **Entering Letters and Characters** in the Directory portion of this guide for additional details regarding adding a name using the keypad)
- The **ChCase** softkey changes the screen text between Upper and Lower case
- The **Save** softkey saves changes made

Use the ☎ key at any time to exit the option menu.

Note: In editing mode, the Volume Bar can be used in place of the (▲ and ▼) keys to control the screen cursor

- Press the Lower end volume bar for Backspace/Erase
- Press the Higher end volume bar to add a Space

To delete a single key label

- At the Edit display screen: Press the **Change** softkey from the key label display
- Press **Select** softkey — this will display the key label **00**
- Use the scroll keys to find the feature key desired
- Press **Delete** to delete the text associated with the feature

To delete all feature label text

- Press the **Change** softkey from the key label display
- Press the ▼ key to move to the **Delete All** option display
- Press **Select** softkey — display indicates **Press delete to confirm**
- Press **Delete** softkey to delete all labels

Downloaded from www.Manualslib.com manuals search engine

Ring Tone

The CM-16 offers the choice of four different ring tones.

To change the ring tone, follow the display menu prompts using the two softkeys as required to change, cancel or select a ring tone. Each of the four ring tones can be heard prior to selection. The display will always show **–confirmed–** to indicate when a selection has been made.

Pressing the **Cancel** softkey returns you to the options list.

Pressing the ☎ key returns you to the main idle display screen.

Custom Name

This option allows a name or extension number etc. to be added/edited and displayed in idle mode. In a multi-handset environment, this is an ideal option to personalize each handset to its user or extension number.

From the Custom name option display, press the **Change** softkey and then the **Edit** softkey. If an existing custom name already appears on the display, the **Delete** softkey is also shown and can be used to delete a custom name.

- Use the keypad to type out a new label or use the scroll keys ▲ and ▼ to move the cursor to the desired display position or to erase text. (See entering names in the **"Directory"** for additional details.)
- The **ChCase** softkey changes the screen text between upper and lower case
- The **Save** softkey saves changes made

Pressing the ☎ key returns you to the main idle display screen.

Note: In editing mode, the Volume Bar can be used in place of the (▲ and ▼) keys to control the screen cursor

- Press the Lower end volume bar for Backspace/Erase
- Press the Higher end volume bar to add a Space

Call Timer

The duration of calls can be displayed by using this option. By default, the Call Timer option is always Off.

To turn the timer on, press the **Change** softkey and the display will indicate **Timer On** and **–confirmed–** and will quickly return to the previous menu display.

Pressing the ☎ key will return you to the main idle display screen.

Downloaded from www.Manualslib.com manuals search engine

Vibrate

The Vibrate option allows the CM-16 handset to signal an incoming call by vibrating as well as ringing. By default, this option is always Off.

To enable this feature, press the **Change** softkey and the display will indicate **Vibrate On** and **-confirmed-** and will quickly return to the previous menu display.

Once the Vibrate is On, the is shown beside the ringer icon on the top right line of the display.

Pressing the key will return you to the main idle display screen.

Handset Pairing

The Handset Pairing option provides flexibility by allowing any CM-16 handset to work with any CM-16 base station. Each handset is factory programmed to work only with the base station shipped with the product.

When using this option, be sure to keep the handset at least a few feet away from the base station. The handset does not need to be placed right in front of the base station when pairing and may not, in fact, be able to pair if too close to the base station.

To program the handset to work with another CM-16 base station in this option, press the **Change** softkey and the display will indicate **Attempting pairing**. If successful, the display will indicate **Pairing successful**. If the pairing does not occur, the display will indicate **Pairing failed Try again**.

Pressing the key will return you to the main idle display screen.

Key Lock

The key lock option enables the user to lock the keypad keys. This prevents accidental activation of the phone while carrying it, putting in a pocket etc.

To lock the keys from the key lock option page:

- Press **Change** softkey to turn Key lock ON or Off. The screen will display **Key lock On** or **Key lock Off -confirmed-**

Pressing the key will return you to the main idle display screen.

Note: You can active the Key Lock Off or On by pressing only the M key and then the * asterisk key.

Downloaded from www.Manualslib.com manuals search engine

Backlight

The Backlight option enables the user to have the display diffuser lighted or not when a keypad key is pressed. Press **Change** softkey to turn Backlight ON or Off.

Once the Backlight option is chosen, the screen will display **Backlight On** or **Backlight Off -confirmed-**

Silent Alert

The Silent Alert option will activate an internal hardware vibrator instead of a regular ringer during an incoming call. By default, the Silent Alert is automatically set to Off.

To activate Silent Alert from the option display:

- Press **Change** softkey to turn alert On or Off. The display will show **-confirmed-** and the handset will vibrate if the alert has been turned on

Once the Alert is On, the is shown on the Top line of the display.

Note: You can active or deactivate the Silent alert by pressing only the key and then the # key.

Note: The Ringer Icon does not appear on the display when the Silent alert is On.

Downloaded from www.Manualslib.com manuals search engine

DIRECTORY

The directory can store up to 50 names and numbers, which are displayed in alphabetical order. If no name is entered, the entries are sorted by number, at the beginning of the directory.

Adding a name and number to the Directory

1. Press Directory softkey
2. Press **Add** softkey. Display prompts **Enter number**
3. Enter the number using the keypad. You can enter up to 24 digits. Hyphens will be automatically added. If you need to enter a pause (between your voice mail number and password, for example) press the **PauseKey** softkey and the pause icon will appear. To erase a digit, use the M key or press the bottom of the volume bar.
4. Press the **Save** softkey. The display will prompt **Enter name**. If no name is to be used for this directory entry, press the **Save** softkey again, the display will show **Item saved**
5. Enter a name using the letters on the dial pad. The name can have up to 15 characters, including spaces. See the section **Entering Letters and Characters** for more details regarding entering text on display. To erase a letter or to add a space use the F and M keys or the volume bar to move the screen cursor position.
6. Press the **Save** softkey. The display will show **Item saved**.

Pressing the key will return you to the main idle display screen. If this key is pressed before the item is saved, it will not be saved.

Note: Names and numbers can also be copied into the Directory from the Redial list. See the **Redial** section for additional details.

Entering Letters and Characters

You can enter characters using the telephone's dial pad. To enter a letter, press the key with that letter on it. If the letter is the second one on that key, press the key twice. For example, to enter the letter "r", press the 7 key three times. The cursor will then advance to the next space.

To change the case of a letter, press the **ChCase** softkey and then enter the letter. By default, the first letter of a word or name will be capitalized and the letters following will be lower case.

Special characters are entered by pressing the 1 key. Characters will appear in this order: , - ' & . ( ) 1

Downloaded from www.Manualslib.com manuals search engine

Finding entries in the Directory

1. Press Directory softkey
2. Use the ▲F and M▼ keys to scroll up and down one listing at a time OR use the dial pad keys to identify entries starting with a certain letter. For example, to find directory entries starting with the letter "S". press the 7 key four times. The first entry will appear. If there are more directory listings using the letter "S", you must type in the second letter of the name.

Dialing from the Directory

1. Press Directory softkey
2. Find the entry you wish to call in the Directory
3. Press the key to dial the number or use the Line softkey, where available, to use a different line to place the call

Changing entries in the Directory

1. Press Directory softkey
2. Find the entry you wish to change in the Directory
3. Press **Options** softkey
4. Press M▼ key once. Display shows **Edit** and **▼=Next**
5. Press **Select** softkey. The current stored telephone number for the directory entry appears on the display. Use the M▼ key or press the bottom of the volume bar to erase a number and use the keypad to correct the telephone number.
6. Press the **Save** softkey to save the change to the phone number. The display then prompts you to **Enter name.** If required, change the name using the instructions found in the "Adding a name and number to the Directory" section of this guide.
7. Press the **Save** softkey to save the revised Directory entry. Will display **Item saved.**

Pressing the key will return you to the main idle display screen.

Downloaded from www.Manualslib.com manuals search engine

Deleting an entry in the Directory

1.	Press Directory softkey
2.	Find the entry you wish to delete in the Directory
3.	Press Options softkey
4.	Press M key twice. Displays **Delete** and ▼=Next
5.	Press **Select** softkey. Displays **Press Delete to confirm**
6.	Press the **Delete** softkey. Displays **Item erased**

Pressing the key will return you to the main idle display screen.

Deleting all entries in the Directory

1.	Press Directory softkey
2.	Press **Delete** softkey. Display shows **Press Delete to erase all**
3.	Press the **Delete** softkey. Display shows **All items erased**

Downloaded from www.Manualslib.com manuals search engine

Limited Warranty

Aastra Telecom warrants this product against defects and malfunctions during a one (1) year period from the date of original purchase. If there is a defect or malfunction, Aastra Telecom shall, at its option, and as the exclusive remedy, either repair or replace the telephone set at no charge, if returned within the warranty period.

If replacement parts are used in making repairs, these parts may be refurbished, or may contain refurbished materials. If it is necessary to replace the telephone set, it may be replaced with a refurbished telephone of the same design and color.

If it should become necessary to repair or replace a defective or malfunctioning telephone set under this warranty, the provisions of this warranty shall apply to the repaired or replaced telephone set until the expiration of ninety (90) days from the date of pick up, or the date of shipment to you, of the repaired or replacement set, or until the end of the original warranty period, whichever is later. Proof of the original purchase date is to be provided with all telephone sets returned for warranty repairs.

Exclusions

Aastra Telecom does not warrant its telephone sets to be compatible with the equipment of any particular telephone company. This warranty does not extend to damage to products resulting from improper installation or operation, alteration, accident, neglect, abuse, misuse, fire or natural causes such as storms or floods, after the telephone is in your possession.

Aastra Telecom shall not be liable for any incidental or consequential damages, including, but not limited to, loss, damage or expense directly or indirectly arising from the customers use of or inability to use this telephone, either separately or in combination with other equipment. This paragraph, however, shall not apply to consequential damages for injury to the person in the case of telephones used or bought for use primarily for personal, family or household purposes.

This warranty sets forth the entire liability and obligations of Aastra Telecom with respect to breach of warranty, and the warranties set forth or limited herein are the sole warranties and are in lieu of all other warranties, expressed or implied, including warranties or fitness for particular purpose and merchantability.

Downloaded from www.Manualslib.com manuals search engine

Warranty Repair Services

Should the set fail during the warranty period;

In North America, please call 1-800-574-1611 for further information.

Outside North America, contact your sales representative for return instructions.

You will be responsible for shipping charges, if any. When you return this telephone for warranty service, you must present proof of purchase.

After Warranty Service

Aastra Telecom offers ongoing repair and support for this product. This service provides repair or replacement of your Aastra Telecom product, at Aastra Telecom's option, for a fixed charge. You are responsible for all shipping charges. For further information and shipping instructions;

In North America, contact our service information number: 1-800-574-1611.
Outside North America, contact your sales representative.

Note: Repairs to this product may be made only by the manufacturer and its authorized agents, or by others who are legally authorized. This restriction applies during and after the warranty period. Unauthorized repair will void the warranty.

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

INDEX

A

ALERTER TONES
- Low Battery **12**
- Check Line Cord **12**
- Out of Range **12**

B

Backlight **18**

BATTERIES
- When setting up the phone **2**

Base Station **4,5**

Battery Charging **6**

BATTERY STATUS ICONS **6**

C

Call Timer **16**

Charging Cradle **5**

CM-16 HANDSET KEY FUNCTIONS **8**

Custom Name **16**

D

DIRECTORY **19**
- Adding a name and number to the Directory **19**
- Entering Letters and Characters **19**
- Finding entries in the Directory **20**
- Dialing from the Directory **20**
- Changing entries in the Directory **20**
- Deleting all entries in the Directory **21**
- Deleting an entry in the Directory **21**

F

FEATURES KEY LIST **13**

H

HANDSET AND BASE STATION **2**

Handset Pairing **17**

HOLD FUNCTION **12**

K

Key label
- To edit key label text **15**
- To delete a single key label text **15**
- To delete all feature label text **15**

Key Lock **17**

L

Language **12**

M

MAKING AND ANSWERING CALLS
- To end a call **11**
- To make a call **11**
- To answer a call **11**

MUTE KEY **12**

O

OPTIONS **14**

Downloaded from www.Manualslib.com manuals search engine

R

REDIAL
- When off hook **11**
- When on hook **11**
- To add a redialed number to the directory **11**
- To delete an entry in the Redial list **12**

Ring Tone **16**

S

SAFETY INFORMATION **2**
SCREEN DISPLAY **9**
SCREEN ICONS **9**
SCREEN PROMPTS **10**
Silent Alert **18**
STATUS LIGHT **13**

V

Vibrate **17**
VOLUME CONTROL
- To adjust the receiver volume **13**
- To adjust the ringer volume **13**

Downloaded from www.Manualslib.com manuals search engine

If you've read this owner's manual and still have problems, please visit our website at www.aastra.com or call 1-800-574-1611 for technical assistance.

© Aastra Telecom Inc. 2004 41-0071-00 Rev 01

Downloaded from www.Manualslib.com manuals search engine